

APPENDIX

C Footing Foundation

Table of Contents

Sample Spread Footing Letter to Contractor	C-2
Method for Installation and Use of Embankment Settlement Devices	C-3

STATE OF CALIFORNIA -- BUSINESS, TRANSPORTATION, AND HOUSING AGENCY

PETE WILSON, Governor

DEPARTMENT OF TRANSPORTATION
Nevada City Construction Office
P. O. Box 691
Nevada City, CA 95959

September 10, 1991

03-NEV-49-21.9
03-295604 F-P049(95)
S. Yuba River Br.

David A. Mowat Company
Highway 49
Nevada City, CA

Gentlemen:

This letter is to clear up any possible misunderstanding about field revision of the elevation of spread footings. You are reminded that Section 51-1.03 of the Standard Specifications states that "the elevations of the bottoms of footings shown on the plans shall be considered as approximate only..."

The Engineer will establish final footing elevations at the earliest time possible consistent with the progress of the work, and that you will be informed in writing of the Engineer's decision.

You are reminded that should you elect to do any work or order any materials before receiving the Engineer's decision regarding spread footing elevations, you do so at your own risk and assume the responsibility for the cost of alterations to such work or materials in the event that revisions are required.

If you have any questions about this or any other matter, please call me at (916) 265-9413.

Sincerely,

John Rodrigues
Resident Engineer



by David R. Keim
Structures Representative

cc: OSC
03 Const
DKDefoe
File c:\wp50\pr3\letters\09-10-91.1

STATE OF CALIFORNIA—BUSINESS AND TRANSPORTATION AGENCY

DEPARTMENT OF TRANSPORTATION
DIVISION OF CONSTRUCTION
Office of Transportation Laboratory
P. O. Box 19128
Sacramento, California 95819
(916) 444-4800



California Test 112
1978

METHOD FOR INSTALLATION AND USE OF EMBANKMENT SETTLEMENT DEVICES

A. SCOPE

The installation, maintenance and data collection procedures for the various embankment settlement devices used to monitor subsurface settlement are described in this method. Analysis of the settlement data is included as a separate part of this method.

Settlement devices are used to monitor the rate and magnitude of settlement occurring at a point within or beneath an embankment during and subsequent to construction. The data obtained from these devices aid the engineer in determining the allowable rate of loading during embankment construction and the appropriate time for removal of surcharge and/or commencement of permanent structure construction.

This method is divided into the following three parts:

- I. Fluid-Level Settlement Devices
- II. Pipe Riser Settlement Device
- III. Settlement Data Analysis

The fluid level vented standpipe unit may be used at most locations. A sealed standpipe unit must be installed at locations where ground water may interfere with the operation of the unit or where excess pore water is expected from the use of dredged material or wet soil in embankment construction. Where it is possible, the tube length between standpipe and indicator unit should generally be limited to a maximum of 300 linear feet (92m). Installations over longer distances can be made, but are not advisable under normal circumstances since it may result in inconsistent test data. Factors such as larger size tubes, change of platform location or changes in elevation of the water line may have to be considered (see Note).

NOTE: There may be job conditions with respect to terrain, long tube length between standpipe and indicator unit, or anticipated large settlements that require special installations. The Materials and Research personnel will assist in these cases.

The pipe riser settlement device is used for monitoring fill settlement over soft foundation soils where the fluid-level settlement devices are not feasible because of flat terrain, width of embankment construction or other features which would make installation

of a fluid level type of settlement platform undesirable. The pipe riser settlement device is a direct-reading unit which is exposed during the full duration of fill construction and surcharge removal. Because of the vulnerability of this unit to damage by the contractor's operations, the pipe riser settlement device should be used only on those projects where the fluid-level type of settlement device would be impractical.

PART I. FLUID LEVEL SETTLEMENT DEVICES— VENTED STANDPIPE UNIT

A. APPARATUS

1. Vented Standpipe Unit (Figure 1)
2. Indicating Unit (Figure 2)
3. $\frac{3}{8}$ in. (.95 cm) Polyethylene Tubing
4. Hand Tools—shovel, bar, posthold auger, hammer, adjustable wrenches, etc.
5. Water Container (approximately 1 gallon (3.78 L) capacity)

B. INSTALLATION

1. Select a location for the standpipe unit on the ground after approximately one foot (.3 m) of fill has been placed above original ground and generally within the area where the maximum height of embankment will be placed (Figure 4).
2. Select a point outside of the toe of the proposed embankment for the indicating unit (Figure 4). Select this location so that sufficient vertical distance will be available for lowering the indicating unit as the standpipe unit settles. A hand level may be used to estimate the desired elevations for the indicating unit.
3. Because of terrain, excessive anticipated settlement, or other causes, it may be necessary to place the standpipe unit in the embankment at varying elevations above the original ground. In these cases, record the vertical distance between the base of the standpipe unit and original ground to allow proper consideration for embankment compression in the settlement analysis.
4. After embankment has been placed 3 to 5 feet (.9 to 1.5 m) above the desired elevation for the

California Test 112 1978

standpipe unit, prepare a pit and trench in the embankment for the standpipe unit and tubing (Figure 4). The bottom of the pit should normally be about one foot above original ground. The trench should be cut to the same depth at the pit and should have a slight downward slope to the indicating unit location. Make sure that the trench is clear of any future contractor's operations such as pile driving, ripping, ditching, etc.

5. Upon completion of the excavation, remove all rocks and large clods from the trench. Prepare a smooth, level area in the pit using fine embankment material.

6. Assemble the standpipe unit as shown in Figure 1. *Do not attach the pipe cap.* Firmly seat the standpipe unit on a prepared level area.

7. Install the indicating unit post at the previously selected point for the indicating unit. This post can be either a metal sign post or a 4 x 4-inch (10 x 10 cm) timber.

8. Using a hand level, attach the indicating unit to the post so that the 2.0 foot (.61 m) graduation on the indicating unit scale is approximately level with the top of the spill tube on the standpipe unit.

9. Push the $\frac{3}{8}$ -inch (.95 cm) water line through the metal tube conduit in the center of the vented standpipe unit until the end is approximately $\frac{1}{8}$ -inch (.32 cm) above the top. Push the $\frac{3}{8}$ -inch (.95 cm) air vent line through the other conduit until approximately $\frac{5}{8}$ -inch (1.59 cm) extends out the top (Figure 1).

10. Unroll the water and air vent lines loosely in the trench from the standpipe to the indicating unit. It might be desirable to encase both lines in $\frac{3}{4}$ in. (1.9 cm) flexible metal conduit for additional protection under rocky material.

11. Cut and attach the water and air lines to the indicating unit as shown in Figures 2 and 3. Then fill the system by pouring water in the sight tube of the indicating unit (Figure 2) until water comes out of the top of the spill tube of the standpipe unit with no air bubbles showing in the line. One gallon of water is more than adequate for 300 foot (92 m) of tubing. When filling, attempt to keep the water level in the sight tube near the 2.0 foot (.61 m) graduation. Do not allow the water level to drop below the bottom of the sight tube since this would allow air to enter the system. It is helpful if someone can watch the overflow at the standpipe unit while the system is being filled to look for evidence of entrapped air and to signal when the system is full. If there is evidence of air bubbles entrapped in the water line, continue charging the system with water until the air is purged through the standpipe unit. After charging

the system with water and purging the water line of all air, attach the indicating unit on the post to provide an initial reading of approximately 2.0 feet (.61 m).

Adjacent to the bottom of the indicating unit place a reference nail in the post at the elevation of the 0.0 graduation. This provides a reference point for surveys and relocation of the indicating unit. Complete the assembly of the standpipe unit by attaching the pipe cap as shown in Figure 1.

12. Cut the air line at approximately the 2.0-foot (.61 m) graduation of the indicator unit. Then loop the air line inside of the indicating unit over the lock hasp (Figure 2). The end of the air line should be pointing down to prevent the entrance of water or debris. This air line must be free of water at all times since it serves to equalize atmospheric pressure at the standpipe unit and the indicating unit.

During cold weather when the air line is too stiff to be looped, cut the air line at the 1.0-foot (.3 m) graduation mark. Then insert the end of a one-foot length of $\frac{1}{4}$ -inch (.64 cm) plastic tubing in the end of the air line and loop the smaller tubing inside the indicating unit.

13. Carefully backfill the trench and pit with material that is free from large rocks or sharp objects and compact by hand for a depth of at least 12 inches (30.5 cm). Special care must be taken around the base of the standpipe unit to prevent separating the base plate from the plywood platform and to prevent breaking or distorting the plastic tubing.

14. After hand backfilling and compacting for a depth of 12 inches (30.5 cm) has been completed, mechanical methods may be used to finish the backfilling operation until the trench is level with the existing fill height. In those cases when the standpipe unit extends above the existing fill height, attach a marker post to the unit and mound fill material around it until it is completely covered. In no cases should compaction equipment be allowed directly over an installation until a minimum of one-foot (30.5 m) of compacted material has been placed over the standpipe unit.

SEALED STANDPIPE UNIT

A. APPARATUS

1. Sealed Standpipe Unit (Figure 5)
2. $\frac{1}{2}$ in. (1.27 cm) plastic drain tubing
3. Remainder of apparatus is the same as for the vented standpipe unit.

B. INSTALLATION

Installation is similar to that for the vented standpipe unit with the following exceptions:

**California Test 112
1978**

1. Install the device as shown in Figure 6.
2. Follow procedure in B-1 thru B-5 (section on vented standpipe unit).
3. Assemble the standpipe unit as shown in Figure 5. Do not attach the outer galvanized pipe. Firmly seat the standpipe unit on the prepared area in the pit.
4. Follow procedure in B-7 and B-8 (section on vented standpipe unit).
5. Attach the $\frac{3}{8}$ -inch (.95 cm) water tube to the base plate as shown in Figure 5.
6. Unroll the water, air vent and drain tubes loosely in the trench from the standpipe to the indicating unit.
7. Follow procedure in B-10 and B-11 (section on vented standpipe unit).
8. Complete the assembly of the sealed standpipe unit by attaching the outer galvanized pipe, other fittings, air vent and drain tubes.*
9. Cut the drain tube near the base of the indicator unit post. Position the drain tube so that water flows out freely and intrusion of soil or debris is prevented.
10. Follow procedure in B-13 and B-14 (section on vented standpipe units).

POST-INSTALLATION PROCEDURES

A. COLLECTION OF DATA

1. As soon as possible after the settlement device has been installed, determine the elevation of the reference to ± 0.01 ft ($\pm .02$ cm) by survey. This elevation should be checked periodically to correct settlement readings for settlement of indicating unit.
2. Settlement Readings.
 - a. Note the height of water in the sight tube.
 - b. Pour sufficient water in the sight tube to raise the water level approximately 0.2 feet (.51 cm).
 - c. Read again after one hour. The water level after adding the water should drop to the first reading or slightly above it.
 - d. If little or no drop is observed, or if the water level is below the 0.05 foot (.13 cm) graduation, refer to Section B, Maintenance, of this Part I.
3. Record the data as indicated in Figure 7. The form is normally used to record chronological data from a single settlement unit installed to monitor settlement. Instructions in filling out the form follow:
 - a. Settlement Data Report (Figure 7).
 - Column (1)—Enter date of reading.
 - Column (2)—Record the water level reading from graduated scale on indicating unit (after

* It may be desirable in some cases to fill around the sealed units with sand so that the tubes will be supported at their attachment points.

adding water as indicated in paragraph 2-b above).

Column (3)—Record the latest elevation of either the “0” graduation on the indicating unit or the nail reference as determined by survey.

Column (4) & (5) not used.

Column (6)—Enter the changes in water level elevation and reference elevation since the last reading. This is the sum of differences between the current and immediately previous entries in columns 2 and 3.

Column (7)—Enter total settlement as *minus* elevation change since installation. This is obtained by changing the sign of the current data in Column 6 and adding this value to the previous entry in Column 7.

Column (8)—Enter height of fill at surface as determined by survey (optional).

Column (9)—Enter height of fill above original ground in total feet.

Column (10)—Enter number of calendar days elapsed since the settlement device was installed.

REMARKS

Column (11)—Enter any information that would be helpful in the analysis of data as shown. If it is necessary to lower the indicating unit on the post, enter date and verticle distance lowered; be sure to include the corrected values in Column 2, 3 and 6.

B. MAINTENANCE

1. Most important to the continued functioning of fluid-level settlement devices is the use of as little water as necessary when recharging the system before reading. For this reason, use only enough water to raise the level in the sight tube approximately 0.2 foot (.51 cm). Continuous additions of greater quantities of water will probably cause flooding of the standpipe unit.

2. If the water level in the sight tube does not drop after adding water, check the unit over a period of several days. Do not, however, add excessive additional water; just observe to see if the unit is slow to respond.

- a. If the unit is not operating properly, remove the indicator box from the post and raise it up about one foot (.3 m). Disconnect the water line from the sight tube and attach the line upright on the post. Inspect the bottom of the sight tube and connector for debris. Remove any obstructions and reassemble the unit without losing water from the water line. After assembly, lower the indicating unit until water is observed in the

**California Test 112
1978**

sight tube, then recharge with clean water as necessary.

- b. If the device is still not operating satisfactorily and the sealed standpipe unit is being used, plug the top of the sight tube and attempt to force compressed air through the air line and out the drain line. Do not use greater air pressure than necessary to obtain a small flow through the lines. Do not allow the water in the sight tube to overflow—keep the top of the sight tube sealed during this operation.
- c. If all other attempts to correct the malfunction fails, disconnect and drain the water line. Then apply compressed air at low pressure to the air line in an attempt to remove debris from the water line. (If the sealed standpipe unit is used, plug the drain line during this operation.) Occasionally, forcing air through the water line will clear the lines if no return is observed when pressurizing the air line. If successful in clearing obstructions from the water line in this manner, considerable care is required in recharging the system with water not to use too much water or in not introducing large voids in the system. For this reason, recharging should be performed only by personnel experienced in this type of activity.

3. If the water level in the sight tube is below the 0.05-inch (.13 cm) graduation or if there is no water in the sight tube, look for leaks around the connection between the sight tube and the water line. If no leak is seen, measure the vertical difference between the 0 inch graduation on the indicating unit and the reference point. Remove the unit from the post and lower it approximately 1.5 feet (.46 m) or until water is observed in the sight tube. If possible, and without adding water, adjust the height of the indicating unit on the post so that the water level in the sight tube is approximately at the 2.0-foot (.61 m) graduation. Add a small quantity of water and check the water level before attaching the indicating unit to the post. After adjusting the height of the indicating unit, again measure the vertical distance between the 0 inch graduation on the indicating unit and the reference point, and record the correction on the settlement data form (Figure 7, Col. 3).

4. It may be necessary to add antifreeze to the water in cold climates to prevent the water from freezing in the sight tube. In these cases, it is best to add the antifreeze solution during the installation and use the antifreeze solution in lieu of water before each reading. This method will help prevent error caused by the higher density solution which would be present at only one end of the system if you added

water.

5. Be sure to replace the cover on the indicating unit after each reading to prevent excessive loss by evaporation and contamination by debris.

6. Occasionally, it may be necessary to protect the air and water lines from rodents or pests. If such a problem exists, protect these lines in flexible conduit extending from the bottom of the indicating unit to below the ground surface. Although this should be done during installation, the conduit can be added later if extreme care is taken not to lose water continuity as described in paragraph 3 above.

PART II. PIPE RISER SETTLEMENT DEVICE**A. APPARATUS**

1. Pipe riser settlement device (Figure 8).
2. Hand Tools—shovel, bar, hammer, pipe wrenches, etc.

B. INSTALLATION

1. It will usually be necessary to determine the location for installing the settlement device by survey. If settlement readings are to be continued after completion of the fill and removal of surcharge, if any, it is imperative that the unit be located directly beneath the median of divided travel lanes or the shoulder of other roadways.

2. After approximately 4 to 6 feet (1.2 to 1.8 m) of embankment material has been placed, excavate a pit to a depth of approximately one foot above original ground at the previously determined location for the settlement device. Prepare a firm, level area free of large rocks or clods for the settlement device at the bottom of the pit.

3. Assemble the settlement device as shown in Figure 8. Attach a ¾-inch (1.9 cm) pipe floor flange to the center of the wood platform with bolts or lag screws. Then screw a 6-foot (1.83 m) length of ¾-inch (1.9 cm) pipe into the floor flange. Place a pipe coupling on the top of the ¾-inch (1.9 cm) pipe and tighten all joints in the assembly using a pipe wrench.

4. Measure and record the distance from the top of the pipe coupling to the top of the wood platform. Then slip the 1½-inch x 5 ft. (3.83 cm x 1.52 m) protective sleeve, which may be either rigid polyvinyl chloride (PVC) or iron pipe, over the control pipe until it is about 2 inches (5 cm) above the floor flange. Put duck seal or other material to hold the protective sleeve in place (Figure 8). Do not attach the protective sleeve to the wood platform or the control pipe. This protective sleeve is used to absorb the friction between the fill material and the settlement unit and, therefore, must be free to move independent from the wood platform and control pipe.

**California Test 112
1978**

5. Firmly seat the settlement device on the prepared area in the bottom of the pit. Then fill and compact by hand fine embankment material free of large rocks and clods around the settlement device to a depth of one foot (.3 m).

6. Using a spirit level, check to make sure the control pipe is reasonably plumb, then carefully fill the pit with embankment material and compact in place.

7. Attach a post to the top of the protective sleeve to alert construction equipment operators of the obstruction. It has been found that a 6-foot (1.83 m) long 1 x 4 inch (2.5 x 10 cm) post painted with alternate one-foot wide stripes of red and white are satisfactory for this use. It is recommended that flagging be attached to the top of this post. The post should be attached so that it can be easily removed and reattached as additional pipe is added during embankment construction.

C. COLLECTION OF DATA

1. As soon as possible after the settlement device has been installed, determine the elevation of the top of the 3/4-inch (1.9 cm) pipe coupling attached to the control pipe. Normally, the elevations required will be obtained by a survey party.

2. During embankment construction, the elevation of the top of the control pipe should be determined by survey approximately twice weekly. After embankment construction is completed, the elevation should be determined frequently enough to indicate significant changes in the rate of settlement. Normally, the time between surveys will be weekly immediately subsequent to completion of the embankment, and the interval between surveys will increase with time.

3. During fill placement, it will be necessary to extend the lengths of the control pipe and protective sleeve. When extending the control pipe, follow the following procedure:

- a. By survey, determine the elevation to the top of the existing control pipe coupling.
- b. Remove the protective post, attach a coupling to the length of control pipe to be added, and tighten the joint with pipe wrenches. While tightening the joint, do not allow the coupling and control pipe to turn. Turn only the coupling.
- c. Insert the added length in the coupling on top of the existing control pipe and tighten the joint by using one pipe wrench on the existing coupling and one pipe wrench on the added length of control pipe. While tightening the joint, do not allow the coupling between the control pipe and the added length to turn. Turn only the

added length of control pipe.

- d. Measure the added length of control pipe including the coupling. If possible, check this distance by determining the elevation of the control pipe by survey.
- e. Record the length of additional control pipe added under Col. 5 on the form shown in Figure 9. Be sure to add this length to the previous value shown in Column 4.
- f. Add and secure a 5-foot (1.52 m) length of protective sleeve to the existing sleeve and secure the post to the top.
4. Enter all data on the form shown in Figure 9 as follows:

Column 1—Record date read.

Column 2—Not used.

Column 3—Not used.

Column 4—Record elevation to top of control pipe as determined by survey.

Column 5—Record length of control pipe.

Column 6—Record the height of the riser above the original ground (Col. 4 minus Col. 5).

Column 7—Record the total settlement in feet. This figure is obtained by subtracting the figure in Col. 6 for the day being read from the figure at the top of Col. 6 (elevation at the time of installation).

Column 8—Record the elevation of the surface of the fill as determined by survey (that is optional).

Column 9—Record height of fill above original ground in total feet.

Column 10—Record number of calendar days elapsed since the settlement device was installed.

REMARKS—Record any information that would be helpful in the analysis of data. Be sure to indicate in this column the date and length added to the control pipe.

PART III. SETTLEMENT DATA ANALYSIS

A. SCOPE

The procedure is given in this Part III for plotting and analyzing settlement data obtained from all types of settlement devices described in this method. A comprehensive settlement analysis is very complex and requires extensive knowledge of soil mechanics and soil structure of the area under study. Considerable information, however, can be obtained by the simplified method described in this part.

1. Plot the data on a semi-logarithmic chart as shown in Figure 10. Note that the scale for days are on the logarithmic abscissa of the chart and both settlement and fill height are scaled arithmetically on the ordinate.

2. Note that during construction, the rate of settle-

**California Test 112
1978**

ment increases in approximate proportion to the fill load applied. This is generally true in all cases where the rate of loading embankment is nearly constant. If embankment construction is suspended for an appreciable length of time, the negative slope indicating rate of settlement should become more positive or flatter until embankment construction resumes. In no case, however, should the rate of settlement curve assume a positive slope.

- a. A sudden increase in the rate of settlement during construction is an indication of impending failure and would dictate that fill loading be stopped immediately.
- b. If the rate of settlement remains excessive after suspending fill operations, additional corrective measures must be taken to reduce the rate of settlement. This may include the removing of a portion of the embankment or constructing berms or struts. Such measures usually require a comprehensive analysis and, for that reason, the problem must be brought to the attention of the District Materials Engineer without delay.
3. After embankment construction has been completed, the rate of settlement will decrease with time, especially for soft foundation soils. However, a marked decrease in the rate of settlement may not

be noticed until an appreciable amount of time has elapsed since completion of the embankment.

- a. Any significant increase in the rate of settlement after completion of the embankment is sufficient cause for immediate corrective action as outlined in paragraph 2b above.
- b. When the plotted data indicates that the slope of the rate of settlement curve is essentially horizontal, the embankment surcharge may be removed and/or permanent structure construction may be started. For example, from data shown in Figure 10, a practical minimal rate of settlement was obtained at about 360 days; at this time the embankment surcharge was removed as shown.
4. Data should be collected at least throughout the life of the contract; longer periods are necessary if significant rates of settlement are discernible.
 - a. The time interval between readings may be increased as the indicated rate of movement decreases.
 - b. Collection of data may extend over a period of several years on selected projects. This long-term settlement data is frequently useful in the design of embankments where similar conditions are encountered.

End of Text (16 pgs.) on Calif. 112

California Test 112
1978

VENTED STANDPIPE UNIT

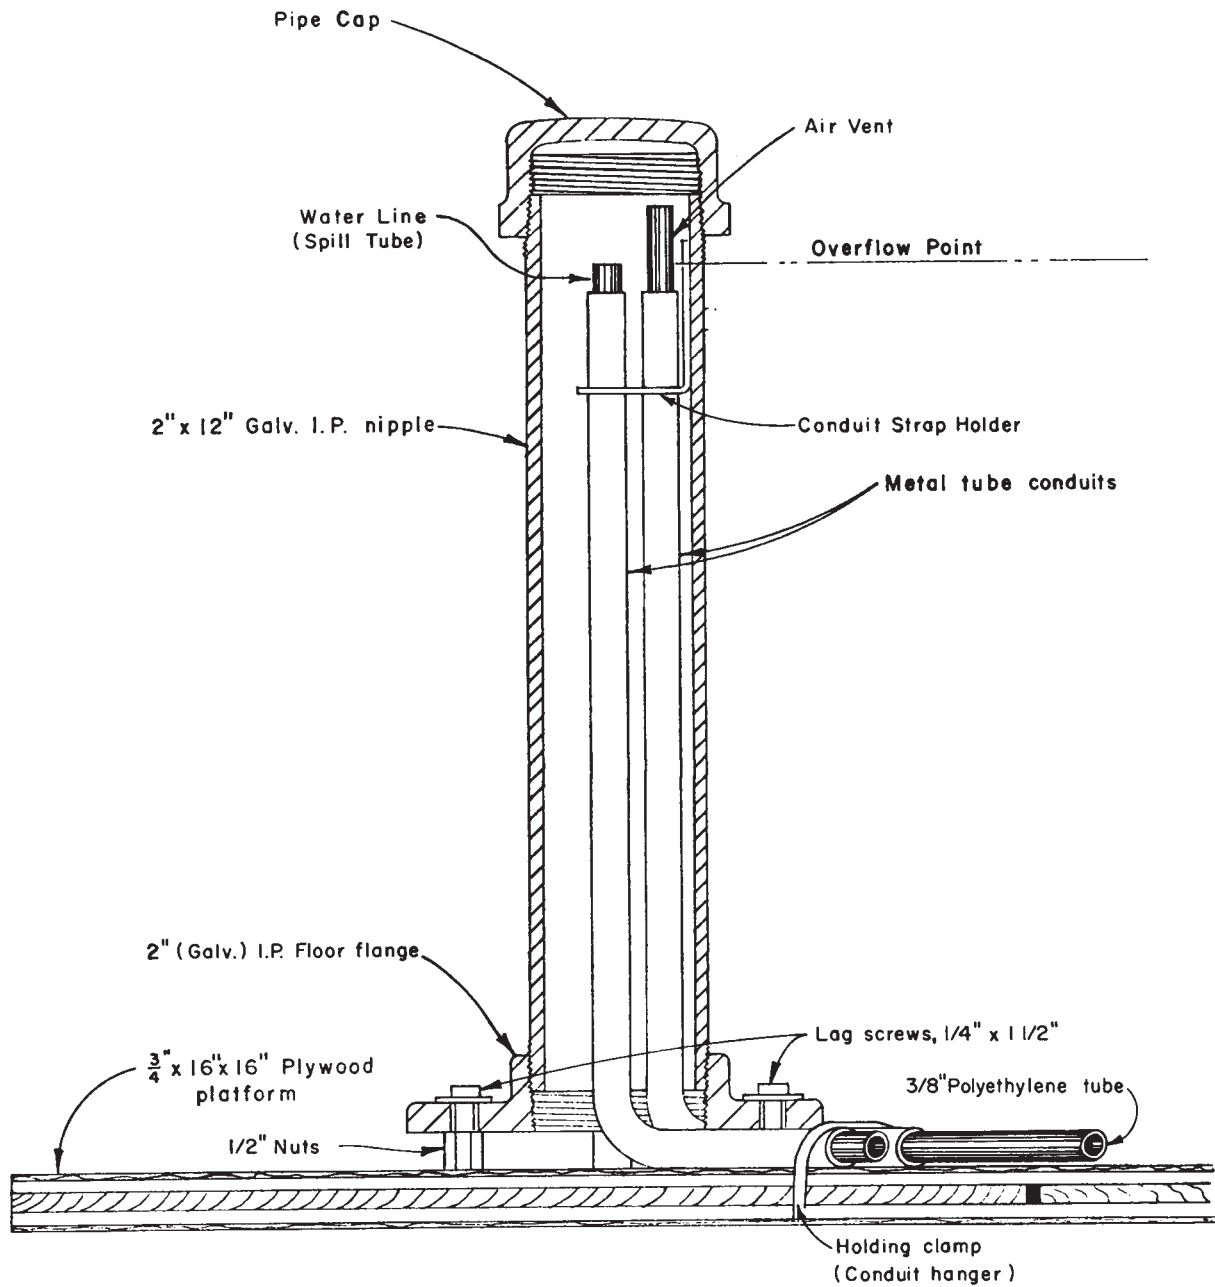


FIGURE 1

7

6—77624

California Test 112
1978

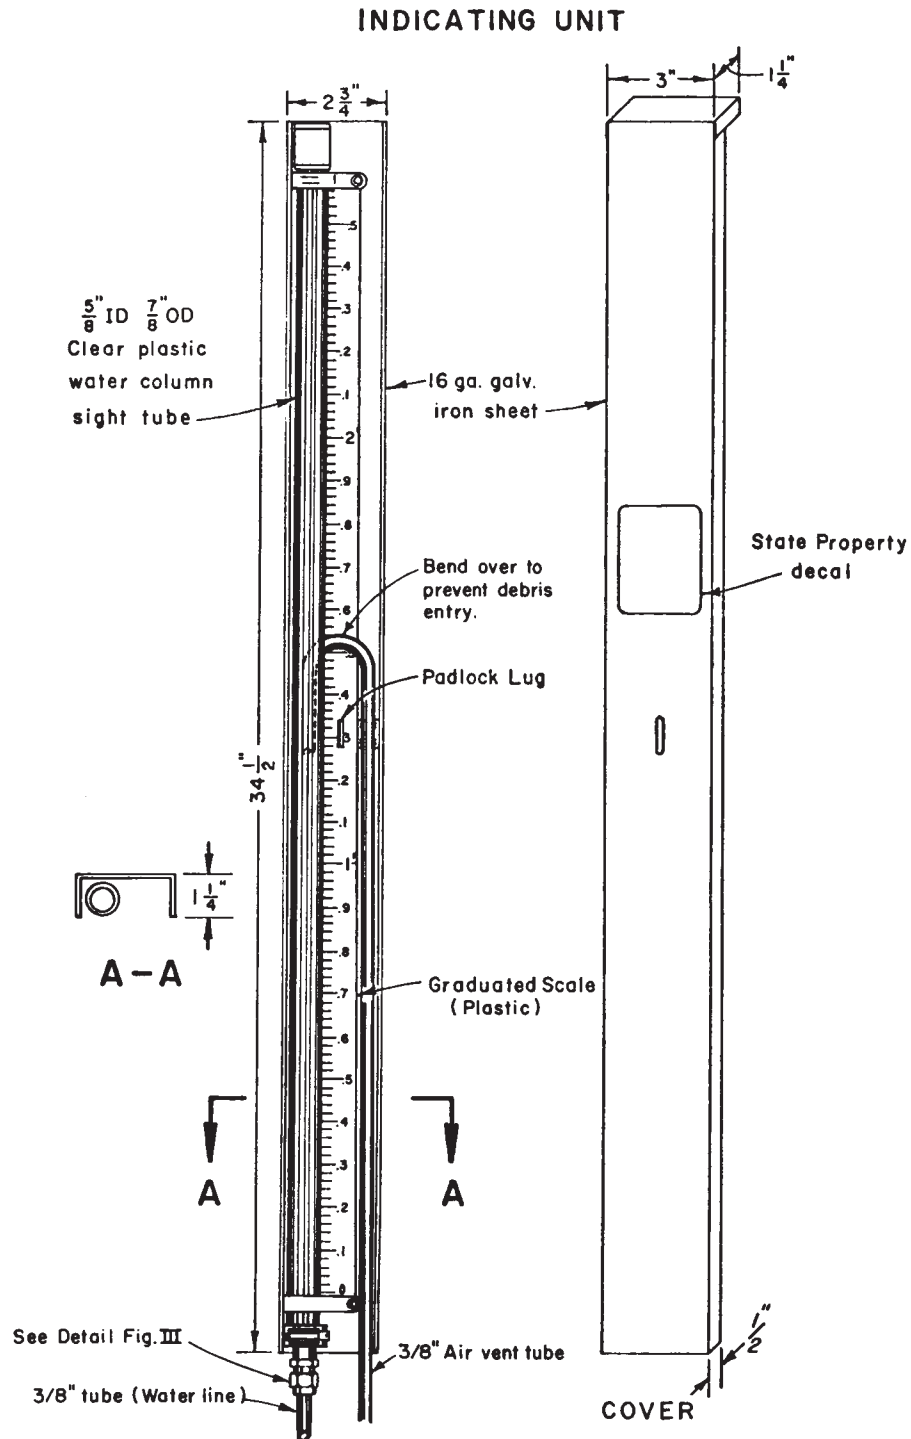


FIGURE 2

California Test 112
1978

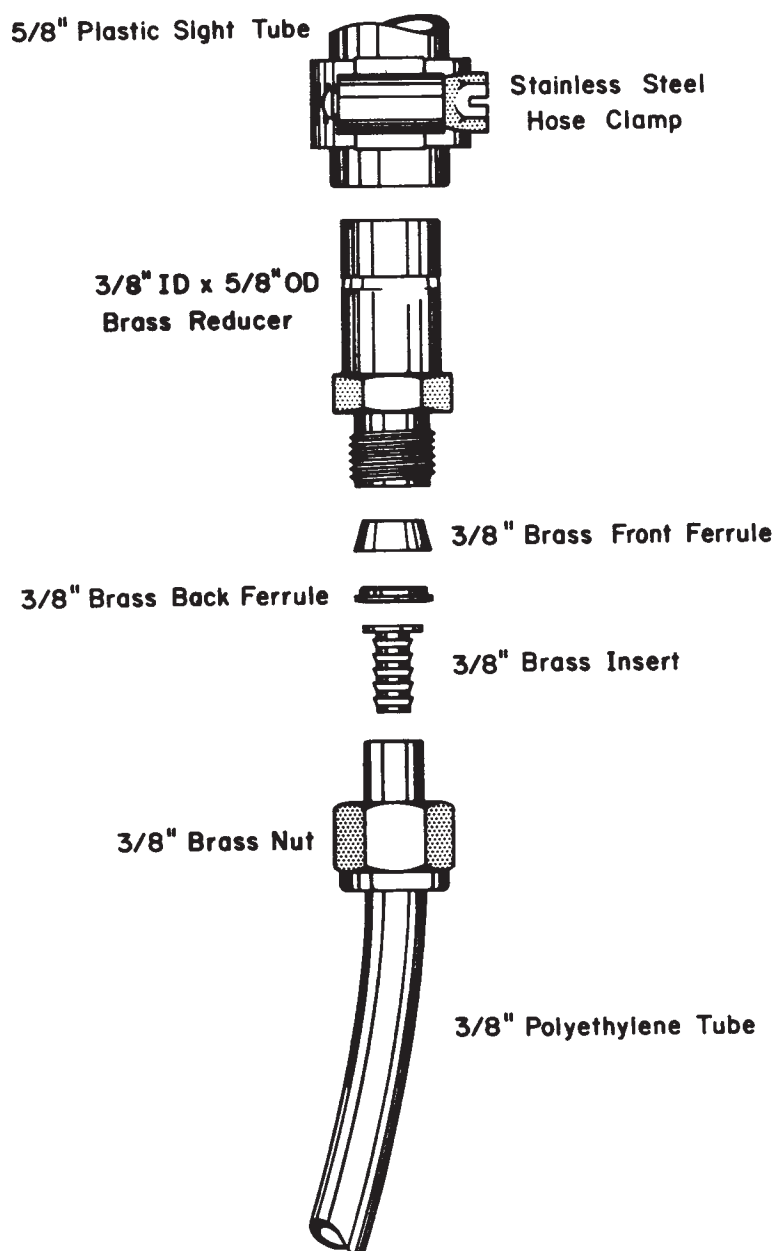


FIGURE 3

California Test 112
1978

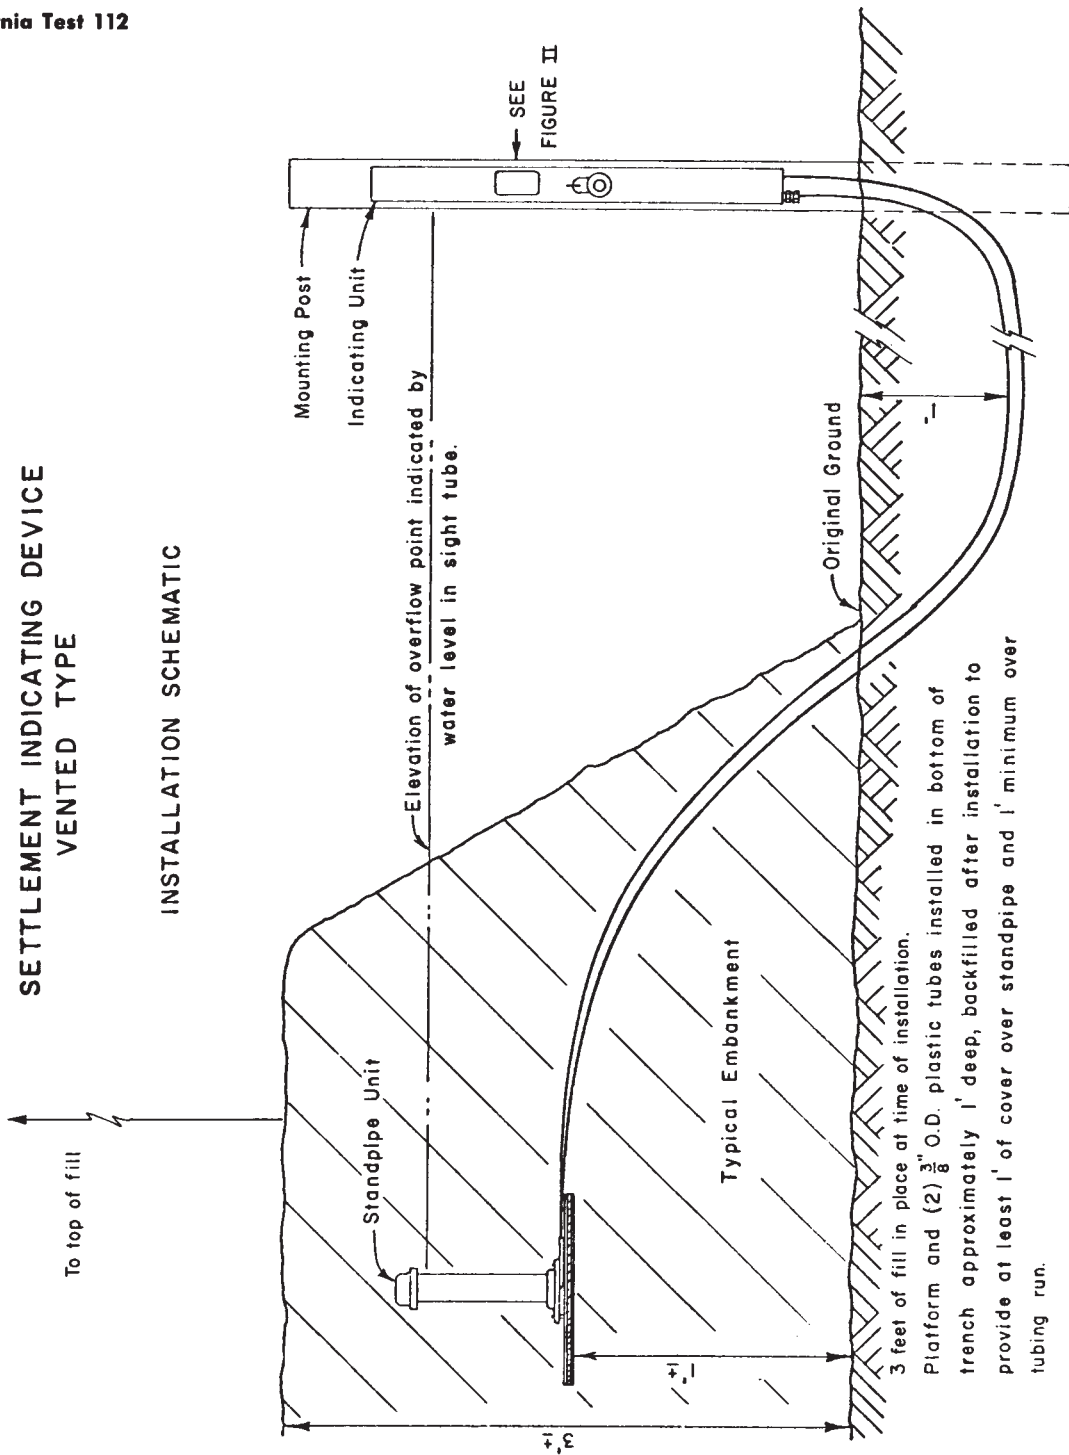


FIGURE 4

California Test 112
1978

SEALED STANDPIPE UNIT

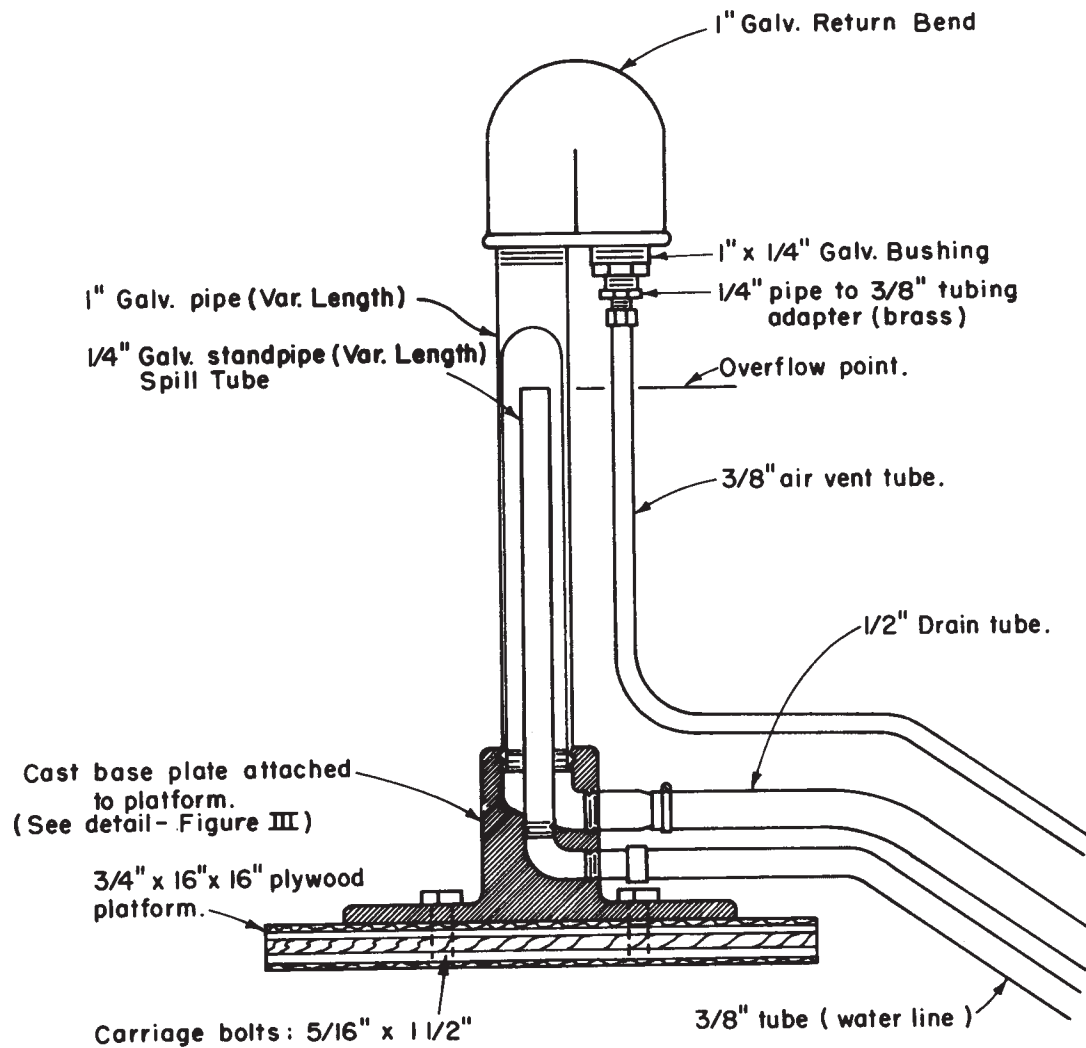


FIGURE 5

**California Test 112
1978**

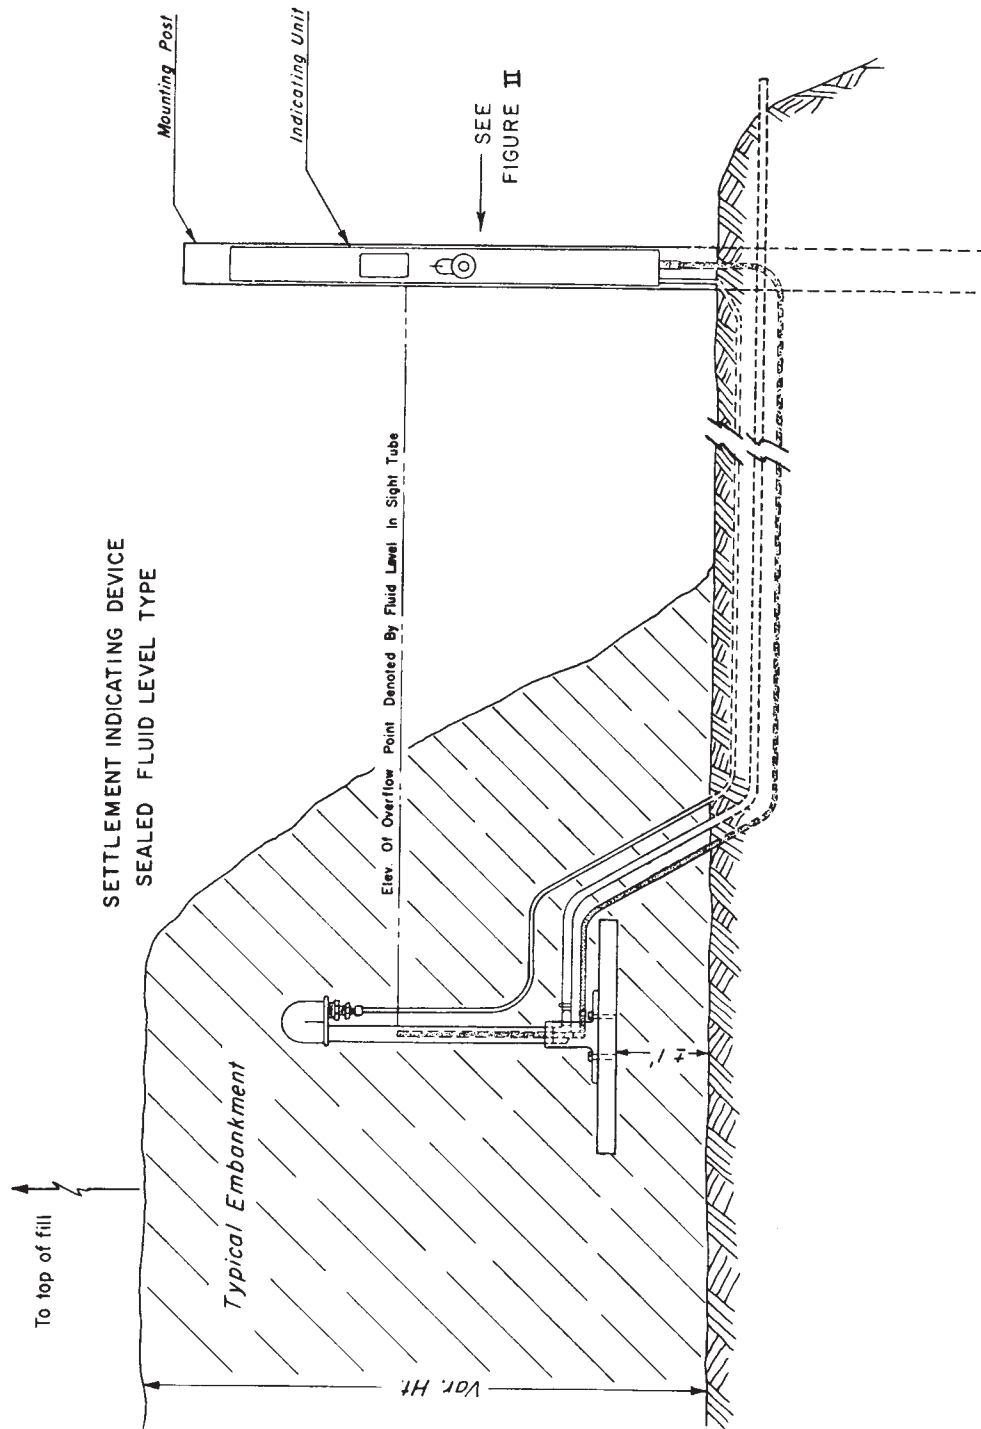


FIGURE 6


California Test 112
1978

STATE OF CALIFORNIA		SETTLEMENT DATA				DEPARTMENT OF TRANSPORTATION			
JOB STAMP		INSTALL. LOC.		COMMENTS:					
		Bn. No.	Unit No.						
		Sta. & Offset							
		Design Ht. (ft.)	Surcharge (ft.)						
		Waiting Period (Days)	270						
		Controlled Loading	3 FT PER WEEK						
DATE	WATER TIME BEGINS	REFERENCE MARK ELEVATION	RISER PIPE ELEVATION TOP OF PIPE	LENGTH OF PIPE	ELEVATION CHANGE	SETTLEMENT IN FEET	FILL HEIGHT SURFACE ELEVATION	ELAPSED TIME DATE	REMARKS
3-3-66	2.49	780.86			0	0	781	3	PLATFORM SET ON 0.6.
3-4	2.44				0.05	0.05	784	6	
3-7	2.42				0.02	0.07	787	6	TO CONVERT FEET TO METERS MULTIPLY FEET BY 0.3048
3-11	2.35				0.07	0.14	790	9	
3-18	2.16				0.19	0.33	793	12	
3-25	1.97				0.19	0.52	796	15	
4-1	1.80	780.86			0.17	0.69	799	19	
4-8	1.65				0.15	0.84	802	21	
4-15	1.54				0.11	0.95	805	24	
4-22	1.47				0.07	1.02	✓	27	SURCHARGE COMPLETED
4-26	1.41	780.84			0.08	1.10	✓	✓	
5-12	1.34	780.84			0.07	1.17	✓	✓	
5-28	1.30				0.04	1.21	✓	✓	
6-8	1.26				0.04	1.25	✓	✓	
7-6	1.27				+ 0.01	1.24	✓	✓	
8-1	1.24	780.81			0.06	1.30	✓	✓	
9-2	1.22				0.02	1.32	✓	✓	
10-26	1.20	780.78			0.05	1.37	✓	✓	
11-7	1.18				0.02	1.39	✓	✓	
13-1	1.17	780.76			0.01	1.40	✓	✓	3.7" MAIN SINCE LAST READ
1-5-67	1.16	780.76			0.01	1.41	✓	✓	SETTLEMENT TERMINATED
9-28-67	1.14	780.76			0.02	1.43	799	31	1-17-67 SURCHARGE REMOVED BY 2-1-67

Form T-2006 (Rev. 1-71)

FIGURE 7

California Test 112
1978

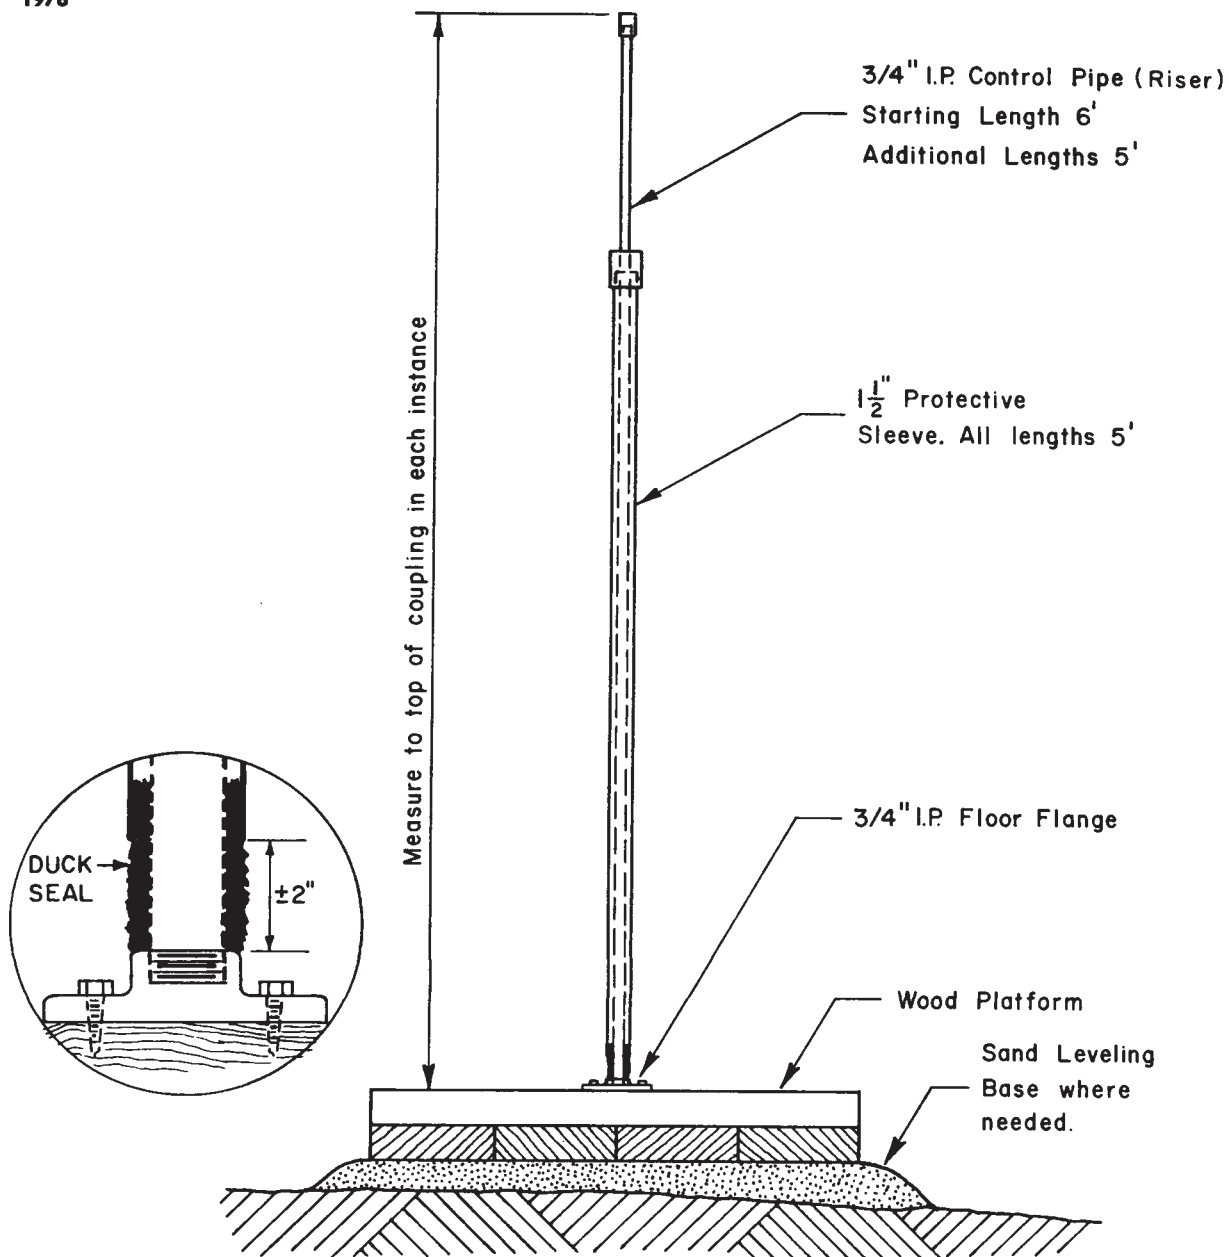

SETTLEMENT INDICATING DEVICE RISER PIPE TYPE

FIGURE 8

California Test 112
1978

STATE OF CALIFORNIA

JOB STAMP

INSTALL. LOC.

BR. NO.

STA. & OFFSET

DESIGN HT. (ft)

WAITING PERIOD (Days)

CONTROLLED LOADING

UNIT No.

SURCHARGE (ft.)

DEPARTMENT OF TRANSPORTATION

COMMENTS:

SETTLEMENT DATA

DATE

WATER TUBE READING

REFERENCE NAIL ELEVATION

RISER PIPE

ELEVATION TOP OF PIPE

ELEVATION CHANGE

SETTLEMENT IN FEET

FILL HEIGHT

SURFACE ELEVATION

FILL ABOVE ORIGINAL GROUND

ELAPSED TIME DAYS

REMARKS

2-25-70			15.42	10.71	4.71			5	0	
2-27			20.68	16.01	4.67	0.04		8	2	
3-3			25.96	21.30	4.66	0.05		10	6	
3-6			25.97	21.30	4.67	0.04		15	9	
3-10			25.94	21.30	4.64	0.07		20	13	
3-20			31.16	26.58	4.58	0.43		25.5	23	
3-27			41.50	37.20	4.30	0.41		33.5	30	
4-6			56.76	53.07	3.69	1.02		49.0	40	
4-15			56.58	"	3.51	1.20		49.5	49	FILL COMPLETED
4-29			56.46	"	3.39	1.32		"	63	
5-7			56.38	"	3.31	1.40		"	71	
5-13			56.36	"	3.29	1.42		"	77	
5-23			56.30	"	3.23	1.48		"	87	
5-29			56.31	"	3.24	1.47		"	93	
6-6			56.27	"	3.20	1.51		"	101	
6-12			56.36	"	3.29	1.42		"	107	
6-20			56.23	"	3.16	1.55		"	115	
6-26			56.18	"	3.11	1.60		"	121	
7-7			56.18	"	3.11	1.60		"	142	
7-24			56.16	"	3.09	1.62		"	149	
8-4			56.13	"	3.06	1.65		"	160	

To convert feet to meters multiply feet by .3048

Form T-2006 (Rev. 1-71)

(1) (2) (3) (4) (5) (6) (7) (8) (9) (10) (11)

California Test 112
1978

STATE OF CALIFORNIA

JOB STAMP

SETTLEMENT DATA

INSTALL. LOC.

BR. NO.

STA. & OFFSET

DESIGN HT. (ft)

WAITING PERIOD (Days)

CONTROLLED LOADING

DEPARTMENT OF TRANSPORTATION

COMMENTS:

UNIT No.

SURCHARGE (ft.)

DATE	WATER TUBE READING	REFERENCE NAIL ELEVATION	RISER PIPE		ELEVATION CHANGE	SETTLEMENT IN FEET	FILL HEIGHT		ELAPSED TIME DAYS	REMARKS
			ELEVATION TOP OF PIPE	LENGTH OF PIPE			SURFACE ELEVATION	FILL ABOVE ORIGINAL GROUND		
2-25-70			15.42	10.71	4.71			5	0	To convert feet to meters multiply feet by .3048
2-27			20.68	16.01	4.67	0.04		8	2	
3-3			25.96	21.30	4.66	0.05		10	6	
3-6			25.97	21.30	4.67	0.04		15	9	
3-10			25.94	21.30	4.64	0.07		20	13	
3-20			31.16	26.58	4.58	0.43		25.5	23	
3-27			41.50	37.20	4.30	0.41		33.5	30	
4-6			56.76	53.07	3.69	1.02		49.0	40	
4-15			56.58	-	3.51	1.20		49.5	49	
4-29			56.46	-	3.39	1.32		"	63	
5-7			56.38	-	3.31	1.40		"	71	
5-13			56.36	-	3.29	1.42		"	77	
5-23			56.30	-	3.23	1.48		"	87	
5-29			56.31	-	3.24	1.47		"	93	
6-6			56.27	-	3.20	1.51		"	101	
6-12			56.36	-	3.29	1.42		"	107	
6-20			56.23	-	3.16	1.55		"	115	
6-26			56.18	-	3.11	1.60		"	121	
7-7			56.18	-	3.11	1.60		"	142	
7-24			56.16	-	3.09	1.62		"	149	
8-4			56.13	-	3.06	1.65		"	160	

FILL COMPLETED

Form T-2006 (Rev. 1-71)

(1) (2) (3) (4) (5) (6) (7) (8) (9) (10) (11)

FIGURE 9

California Test 112
1978

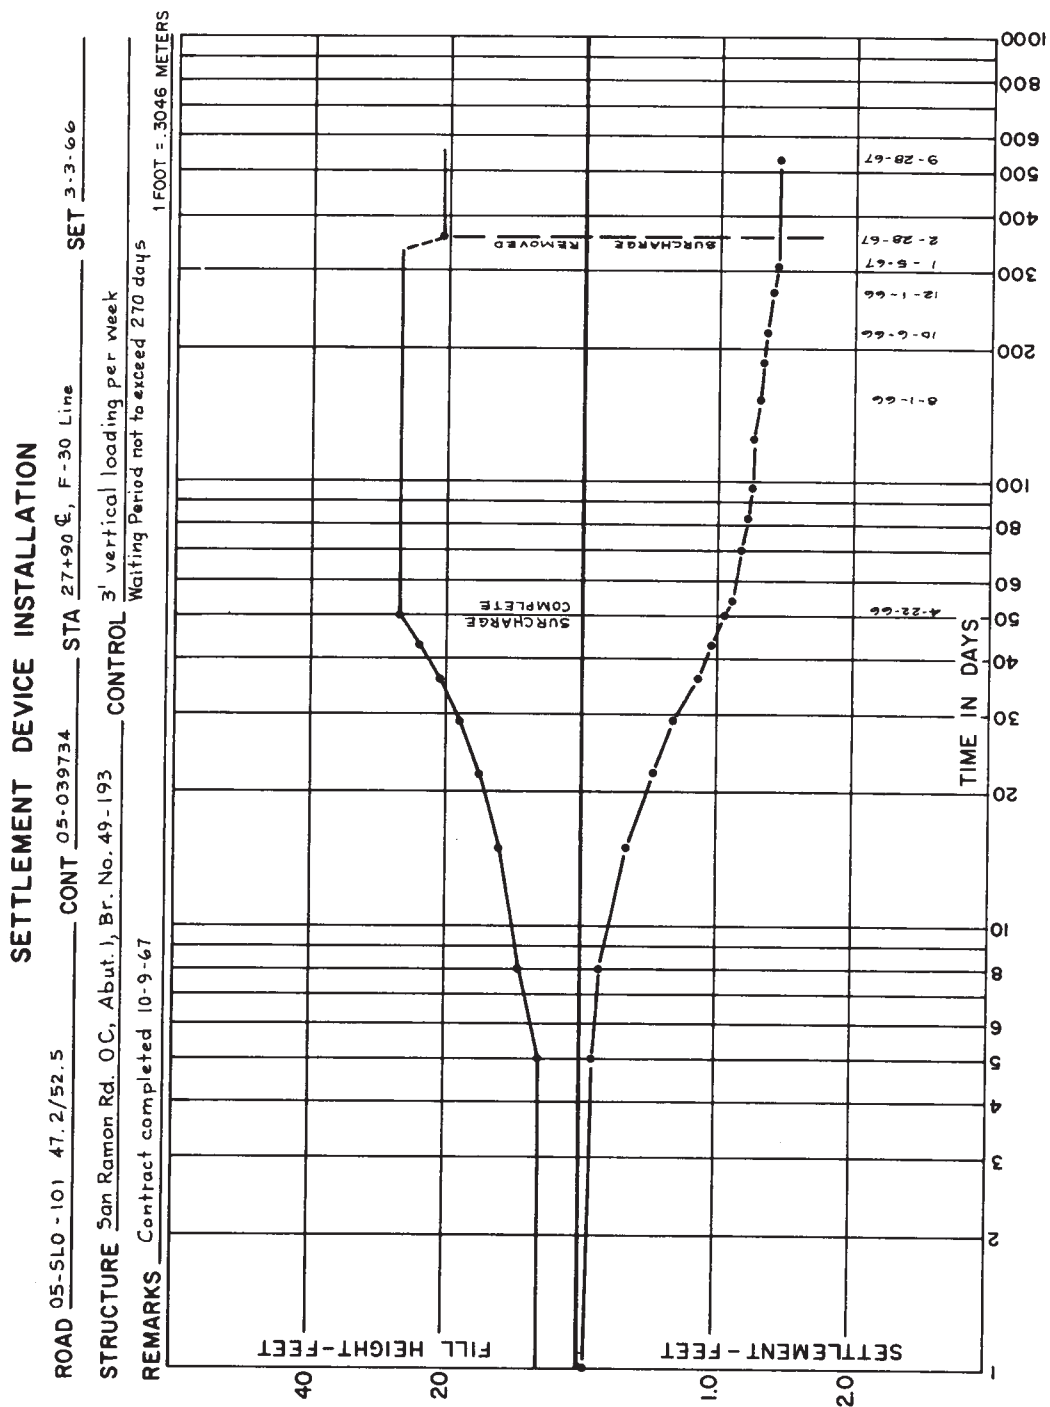


FIGURE 10